OLYMPUS®

DIGITAL CAMERA

Stylus 800
μ DIGITAL 800

Basic Manual

ENGLISH 2

FRANÇAIS 26

ESPAÑOL 50

DEUTSCH 74

РУССКИЙ 98

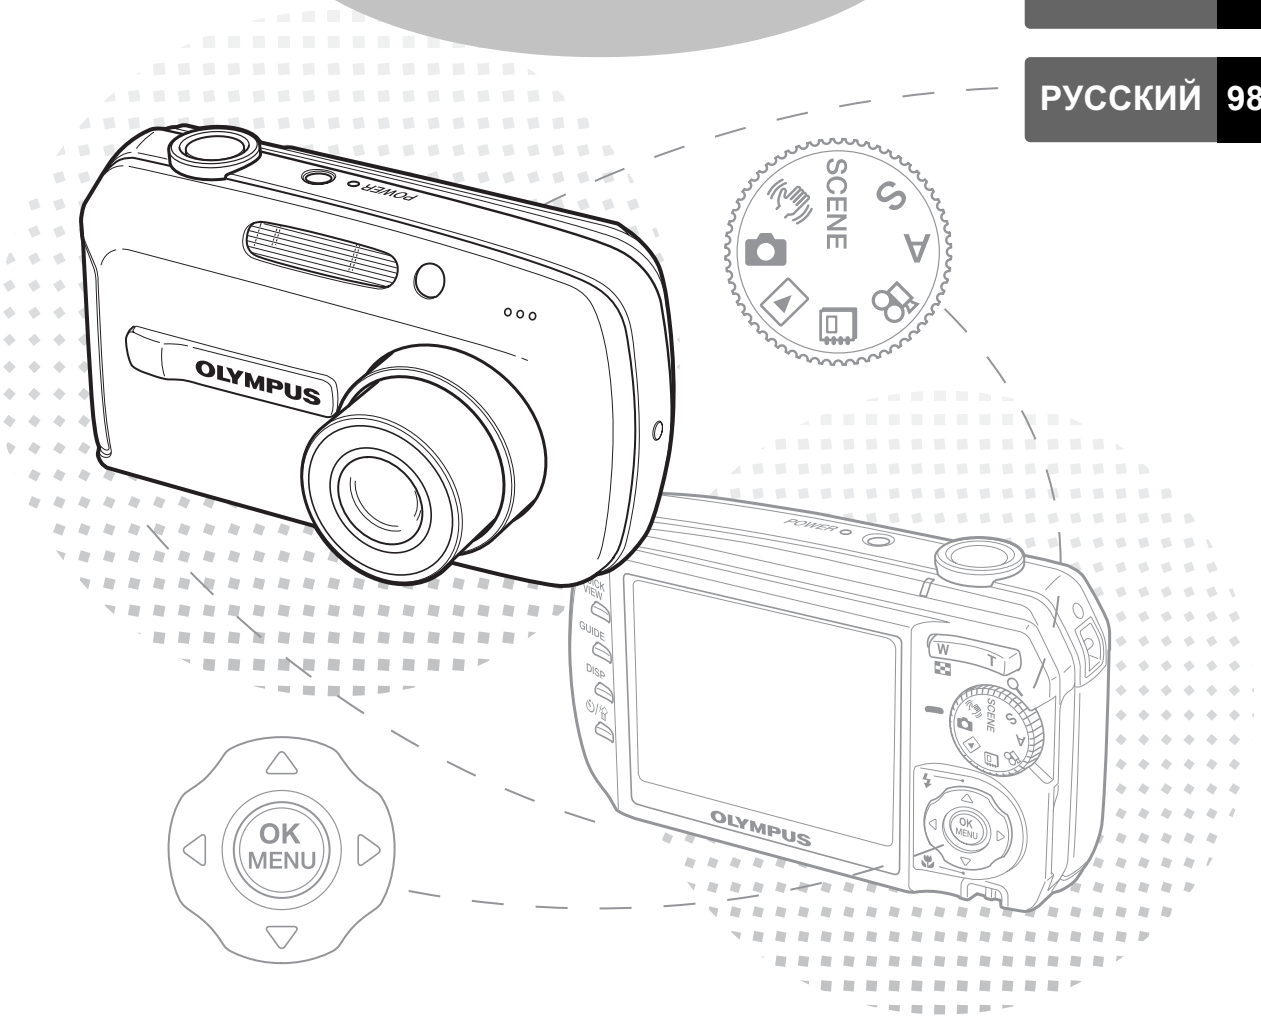

UNPACKING THE BOX CONTENTS

If you find any contents missing or damaged, contact the place of purchase.

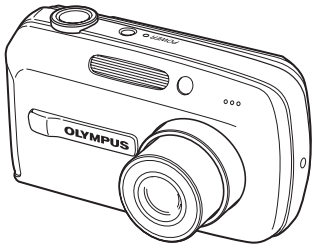

Digital Camera

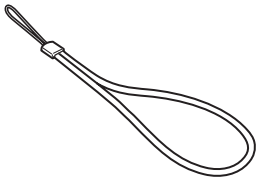

Strap

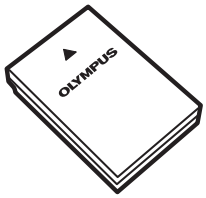

Lithium Ion Battery
(LI-12B)

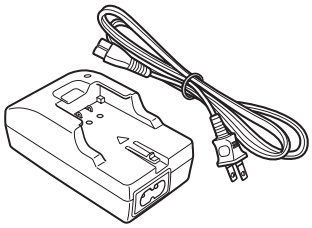

Battery Charger
(LI-10C)

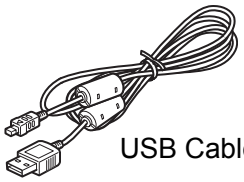

USB Cable

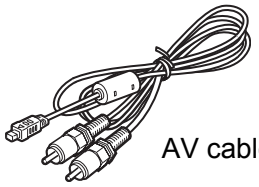

AV cable

Other bundled items

- OLYMPUS Master CD-ROM
- Basic Manual (this manual)
- Advanced Manual (CD-ROM)
- Warranty Card
- Registration Card

Contents vary depending on the area where you purchased this camera.

Attaching the strap

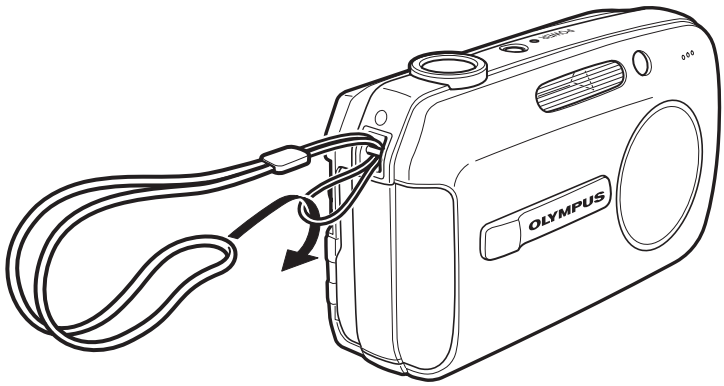

- Pull the strap tight so that it does not come loose.

MANUAL CONTENTS

- Thank you for purchasing an Olympus digital camera. Before you start to use your new camera, please read these instructions carefully to enjoy optimum performance and a longer service life.
- This manual explains shooting and playback basics. For details on functions, read the advanced manual. Keep this manual in a safe place for future reference.
- We recommend that you take test shots to get accustomed to your camera before taking important photographs.
- The screen and camera illustrations shown in this manual were produced during the development stages and may differ from the actual product.

En

UNPACKING THE BOX CONTENTS 2
THE CAMERA'S CAPABILITIES 4
CHARGING THE BATTERY 5
INSERTING THE BATTERY 5
TURNING THE CAMERA ON 6
TAKING A PICTURE 7
REVIEWING PICTURES 8
ERASING PICTURES 8
SETTING FREQUENTLY USED FUNCTIONS 9
PRINTING YOUR PICTURES 11
ENJOYING YOUR PICTURES ON A COMPUTER 12
SPECIFICATIONS 14
SAFETY PRECAUTIONS 16

Be sure to read and observe all safety precautions.

The manuals used with this camera are shown below.

Basic Manual (this manual)	Includes explanations of basic functions for first-time users
Advanced Manual	Details all the functions and operations

- References to the Advanced Manual are indicated as below.
  ☞ Advanced Manual "Single-frame erase" (P. 81)

THE CAMERA'S CAPABILITIES

En

Take pictures

Choose from 19 different scene modes according to the picture you want to take and simply press the shutter button.

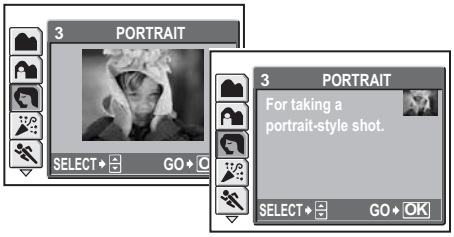

Organize pictures

Quickly access the pictures you want to see on the calendar display. Organize your pictures with the album function.

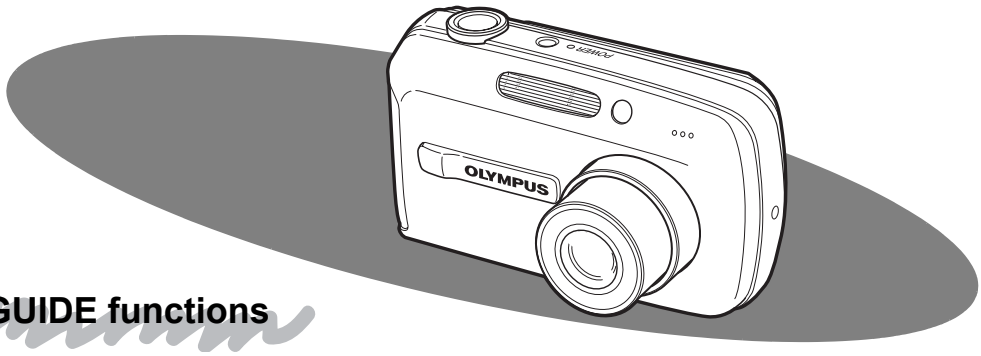

GUIDE functions

The shooting guide gives you advice on how to take pictures. The menu guide gives explanations on menu operation. Just press the **GUIDE** button and the camera tells you all you need to know.

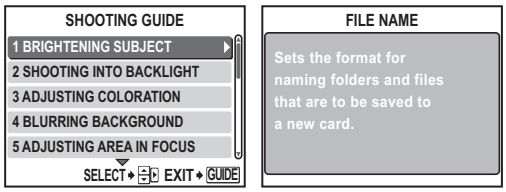
SHOOTING GUIDE
1 BRIGHTENING SUBJECT
2 SHOOTING INTO BACKLIGHT
3 ADJUSTING COLORATION
4 BLURRING BACKGROUND
5 ADJUSTING AREA IN FOCUS
SELECT EXIT GUIDE
FILE NAME
Sets the format for naming folders and files that are to be saved to a new card.

Print pictures

You can connect the camera directly to your PictBridge-compatible printer to print pictures without the use of a computer.

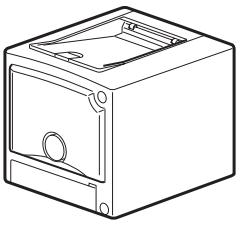

Display pictures

Enjoy the slideshow to background music. You can even connect the camera directly to a TV to display pictures for your friends and family.

Use with a computer

Using the provided OLYMPUS Master software on your computer, you can enjoy editing, viewing, and printing pictures.

CHARGING THE BATTERY

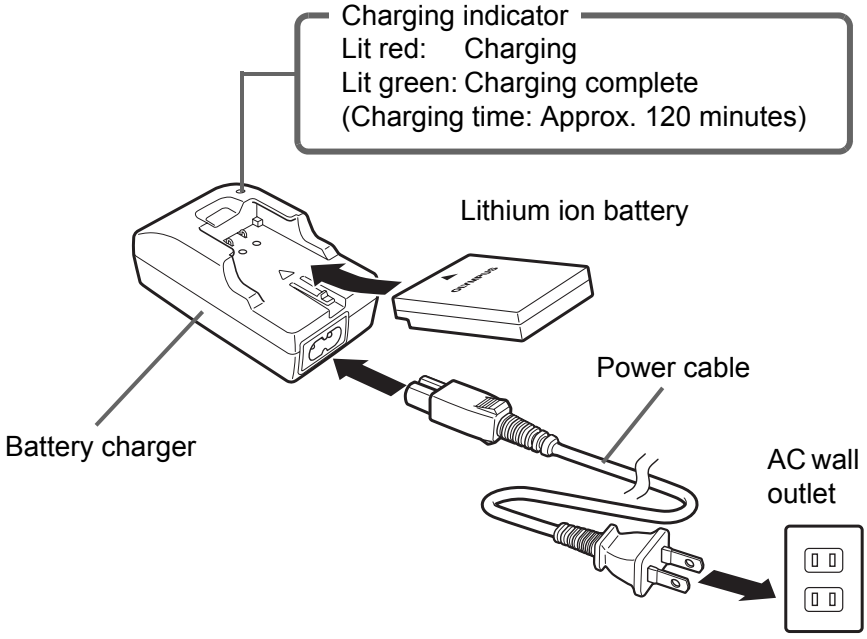

INSERTING THE BATTERY

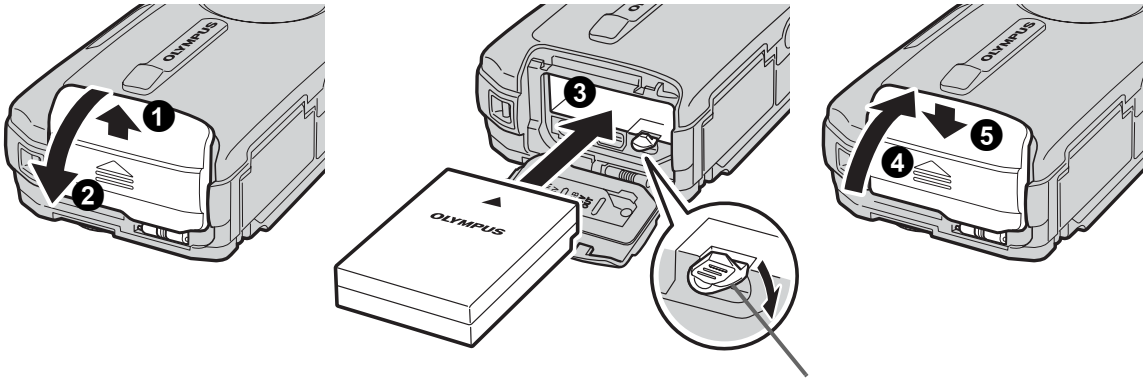

To remove the battery

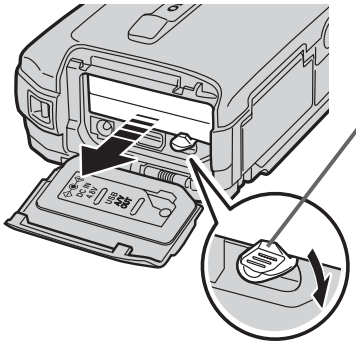

TURNING THE CAMERA ON

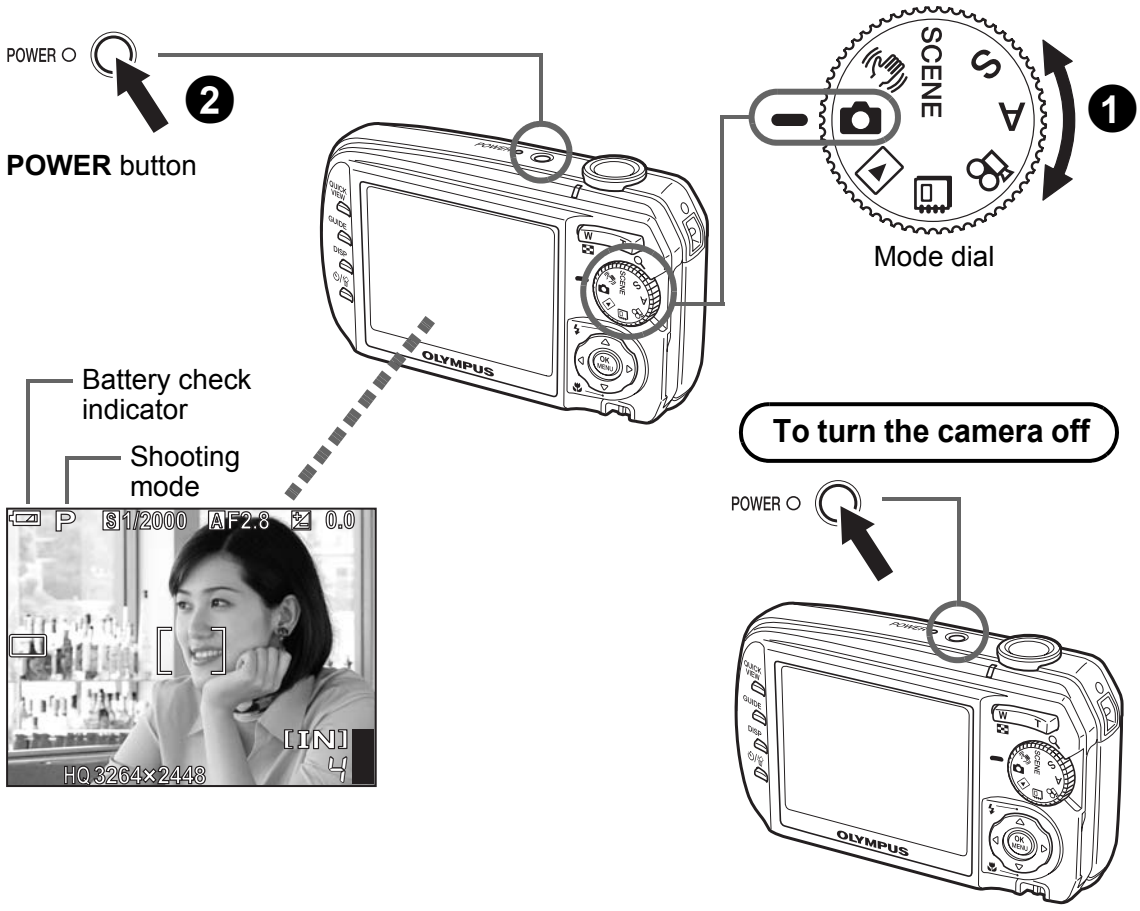

Battery check indicator

The battery check indicator is displayed on the monitor when the camera is turned on.

Lit (green) (Disappears after a while.)	Lit (red)	[BATTERY EMPTY] is displayed.
Ready to shoot.	Only a little power is remaining. The battery needs charging soon.	No power is left. Charge the battery.

When the camera stops operating

To save battery power, the camera automatically enters the sleep mode and stops operating after about 3 minutes of non-operation. The camera activates again as soon as you operate the shutter button or zoom button. The camera retracts the lens and turns off automatically 15 minutes after the camera enters sleep mode. Turn the camera on again to use.

TAKING A PICTURE

Hold the camera securely

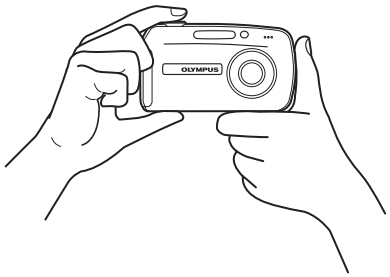

Compose your picture

- Position the AF target mark on your subject.
- Press the zoom button to get close-up pictures of your subject.

AF target mark

Focus on your subject



- Press the shutter button lightly.
- The green lamp lights when the focus and exposure are locked.
- The ϟ mark lights when the flash is about to fire.

Green lamp

ϟ mark

Take the picture

Memory gauge



Before taking any pictures (Off)	After taking one picture (Lit)	After taking several pictures (Lit)	Maximum reached (All lit) Wait until the indicator turns off again before taking more pictures.

En

REVIEWING PICTURES

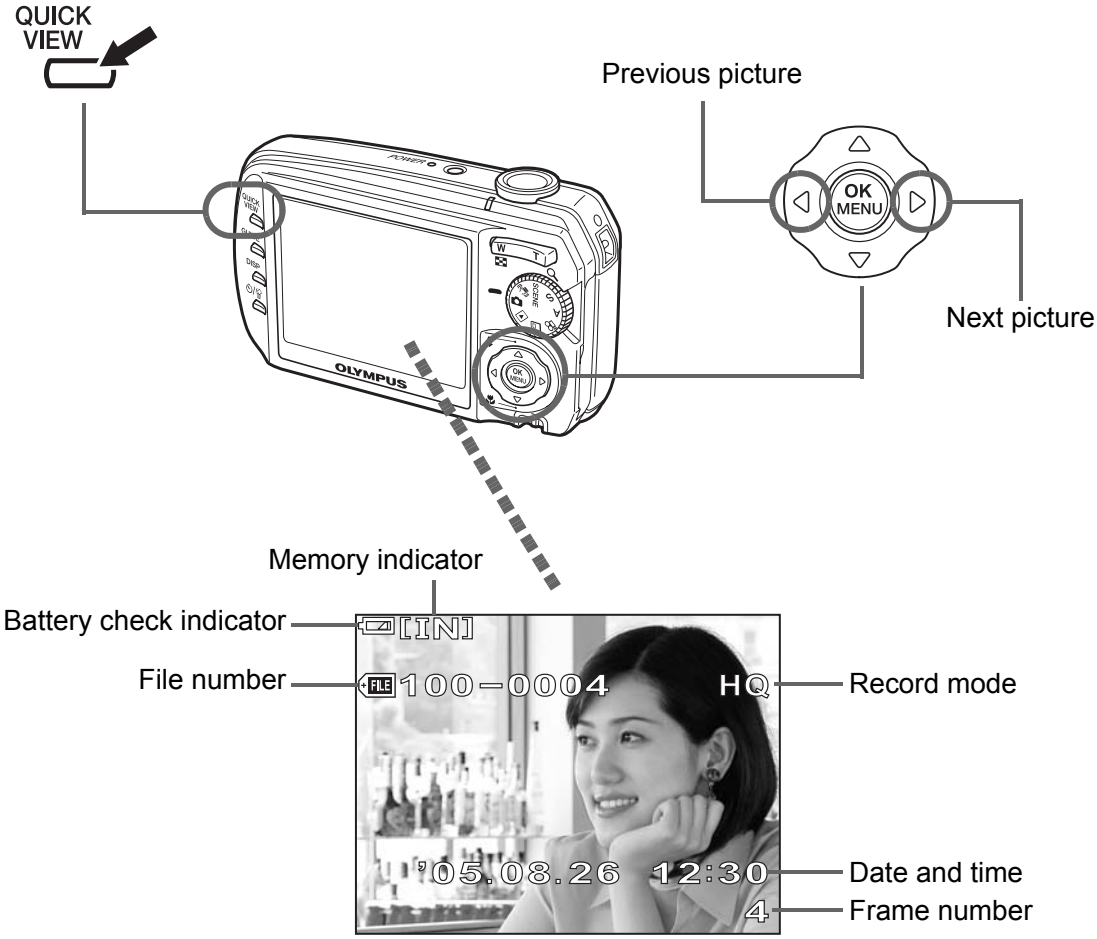

ERASING PICTURES

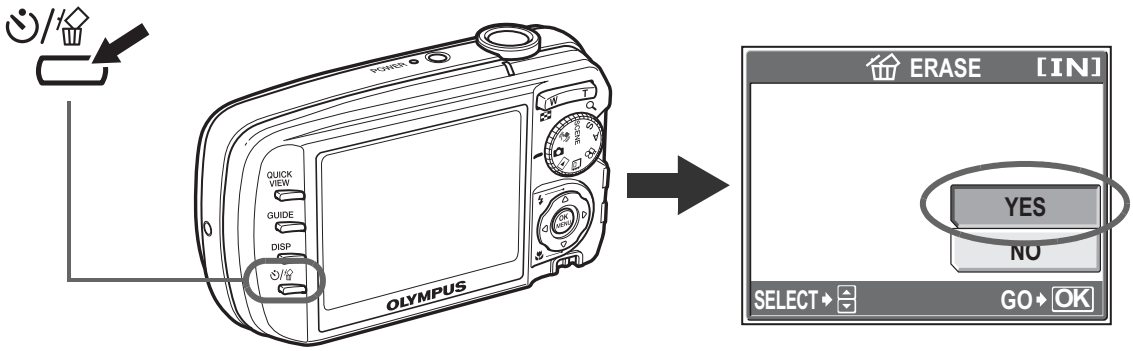

☞ Advanced Manual “Single-frame erase” (P. 81)

SETTING FREQUENTLY USED FUNCTIONS

Direct buttons

This camera features buttons for setting functions directly.

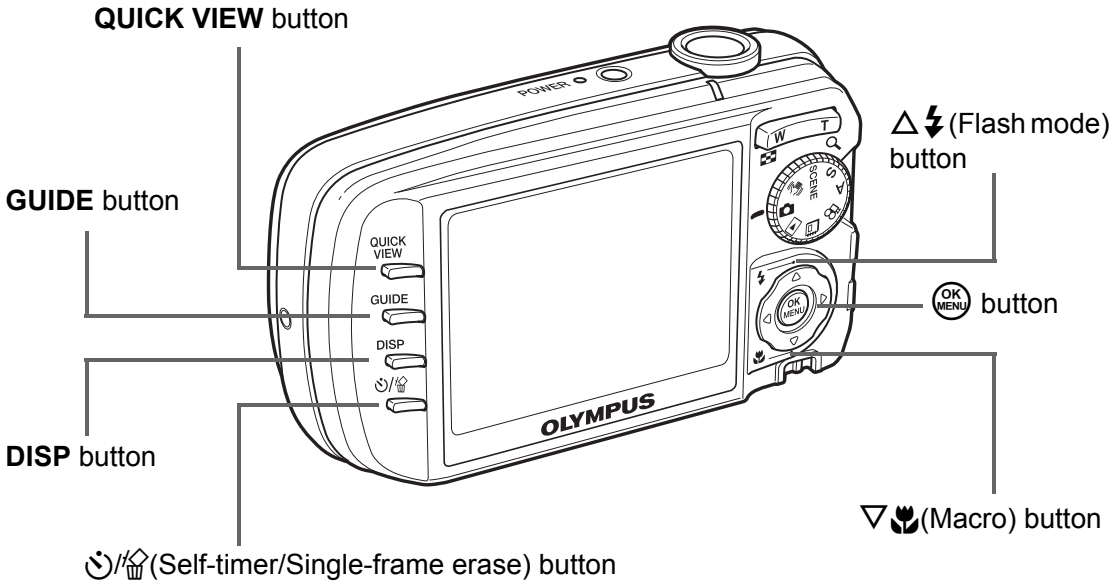

To set the flash mode

Press △ repeatedly in shooting mode to set the flash mode.

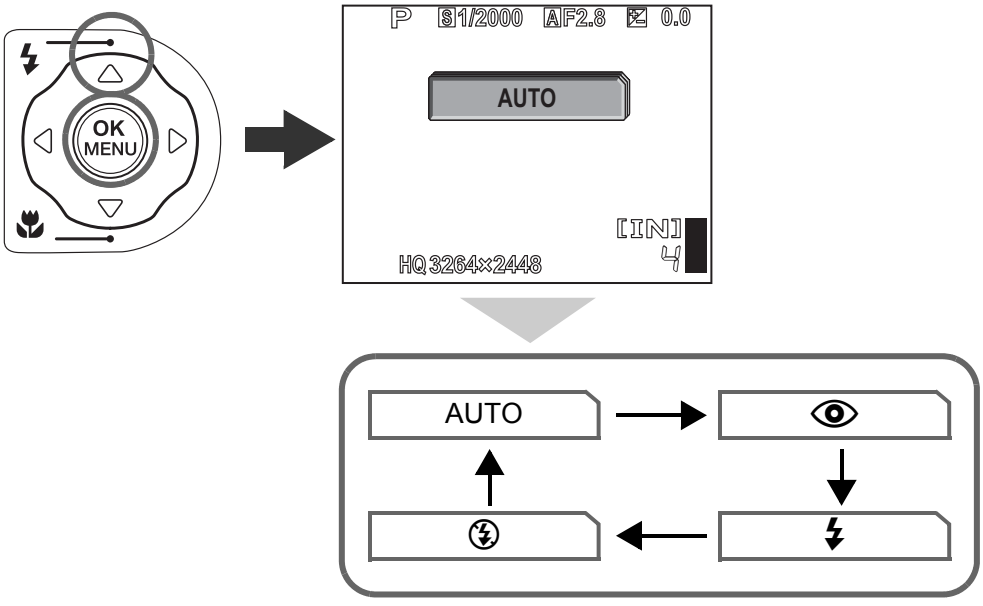

☞ Advanced Manual “Flash shooting” (P. 41)

Menus

Press (OK MENU) to display the top menu on the monitor. Use the menu for setting each function.

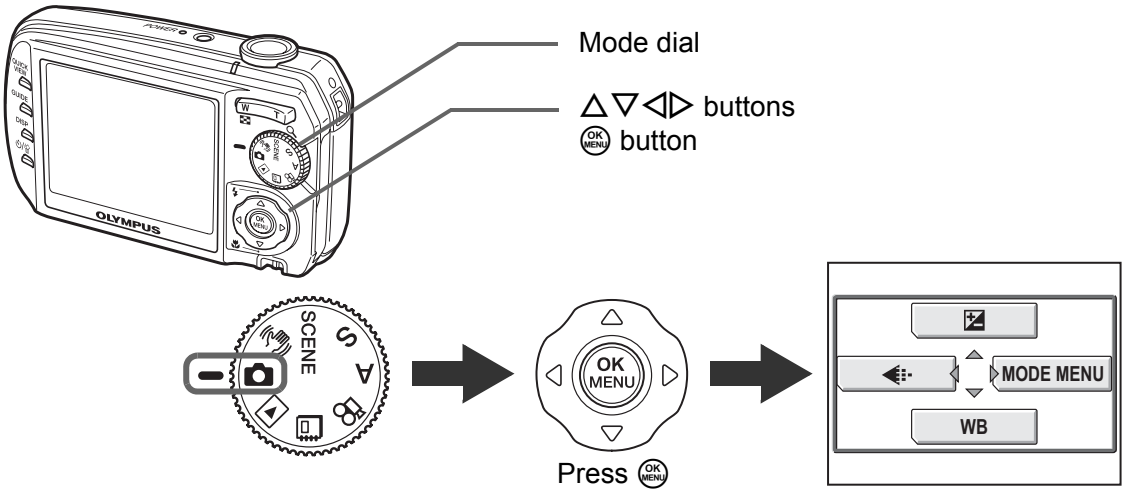

To set the record mode

You can change the record mode used in shooting mode.

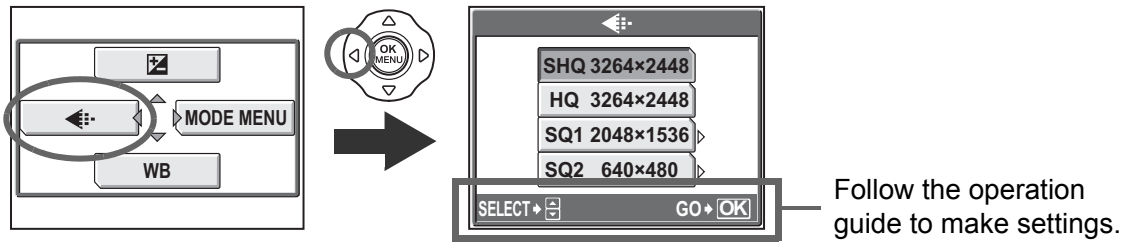

☞ Advanced Manual “Record mode” (P. 25)

To set the date and time

You can set the date format, year, month, and day.

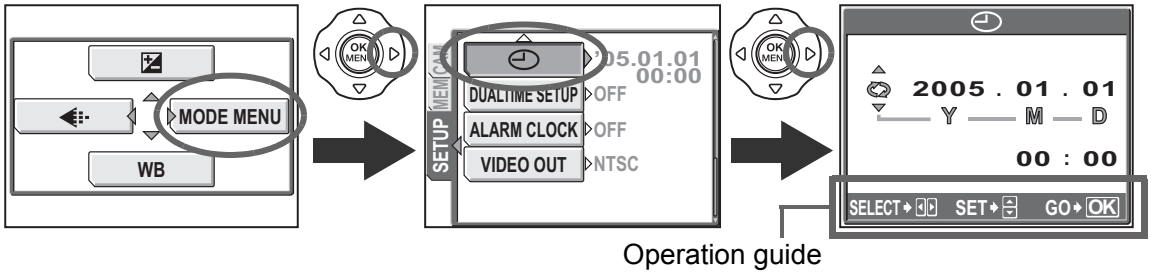

☞ Advanced Manual “Setting the date and time” (P. 92)

PRINTING YOUR PICTURES

By connecting the camera to a PictBridge-compatible printer with the USB cable, you can print out recorded pictures directly.

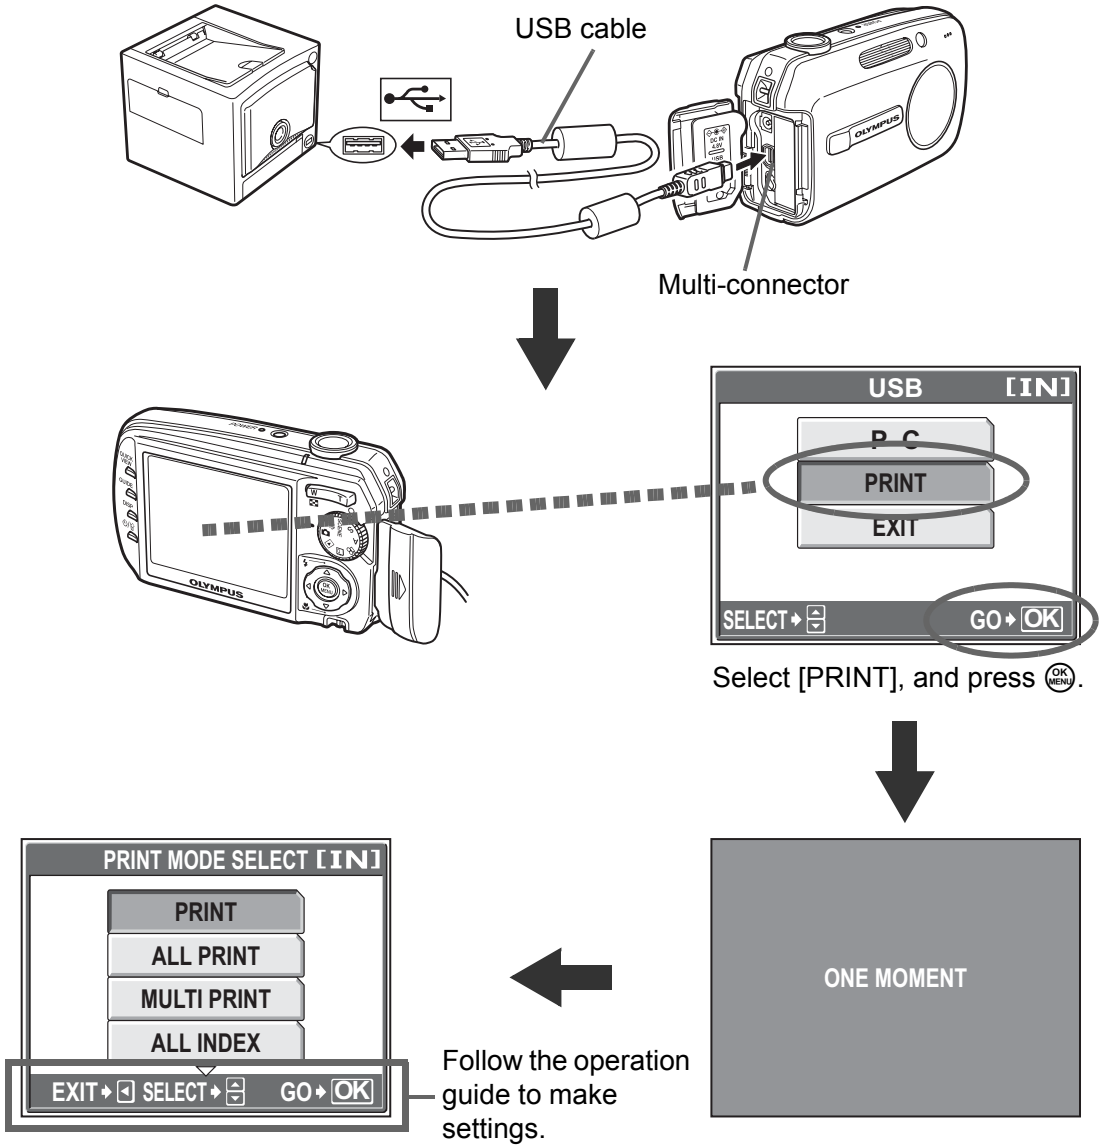

PRINT	Prints the selected picture.
ALL PRINT	Prints all pictures.
MULTI PRINT	Prints one picture in multiple layout format.
ALL INDEX	Prints all pictures in index format.
PRINT ORDER	Prints pictures according to print reservations.

☞Advanced Manual “Direct printing (PictBridge)” (P. 99)

ENJOYING YOUR PICTURES ON A COMPUTER

The provided CD-ROM contains OLYMPUS Master software for editing and managing image files. Install the software to get the most out of your digital pictures and movies.

What is OLYMPUS Master?

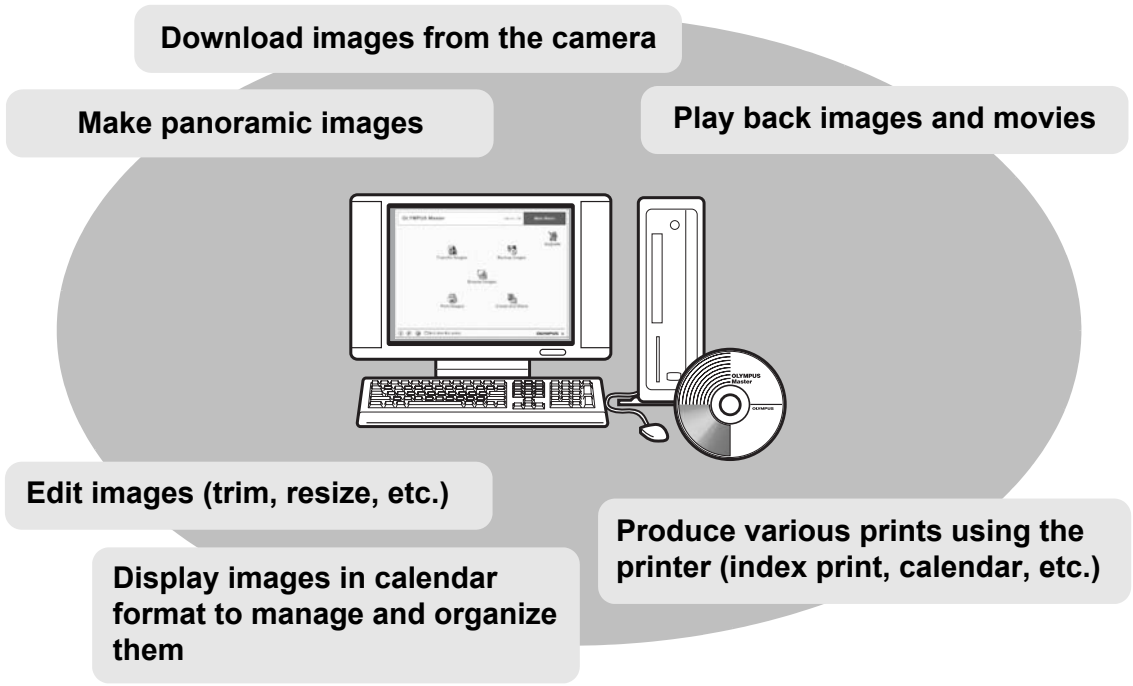
Download images from the camera
Make panoramic images
Play back images and movies
Edit images (trim, resize, etc.)
Produce various prints using the printer (index print, calendar, etc.)
Display images in calendar format to manage and organize them

Installing OLYMPUS Master

Insert the CD-ROM into the CD-ROM drive.

Windows

Click “OLYMPUS Master”.

Macintosh

Double-click the “Installer” icon.

- Follow the on-screen instructions.

Connecting the camera to a computer

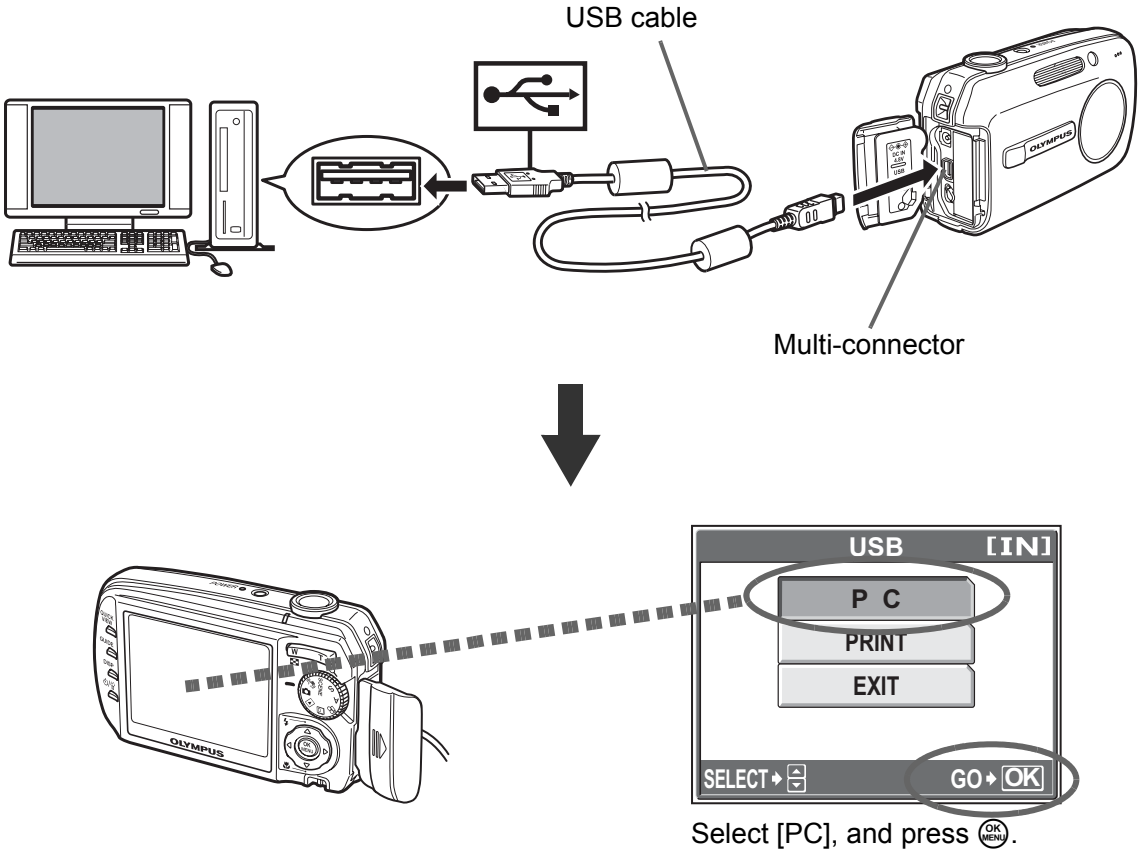

Select [PC], and press OK.

☞ Advanced Manual “Connecting the camera to a computer” (P. 111)

User Registration

After installing the OLYMPUS Master software, we recommend you fill out the user registration for your camera. By making your registration, you will receive information on software and firmware updates from Olympus.

SPECIFICATIONS

Camera

Product type : Digital camera (for shooting and displaying)

Recording system

- Still pictures : Digital recording, JPEG (in accordance with Design rule for Camera File system (DCF))
- Applicable standards : Exif 2.2, Digital Print Order Format (DPOF), PRINT Image Matching III, PictBridge
- Sound with still pictures : Wave format
- Movie : QuickTime Motion JPEG

Memory : Internal memory
xD-Picture Card (16 MB to 1GB)

No. of storable pictures when using the internal memory

Still pictures (without sound)

Record mode	Image size	Number of storable still pictures
SHQ	3264 × 2448	4
HQ		9
SQ1	2560 × 1920	15
	2272 × 1704	19
	2048 × 1536	24
SQ2	1600 × 1200	29
	1280 × 960	46
	1024 × 768	70
	640 × 480	114

Movie

Record mode	Image size	Remaining recording time
SHQ	640 × 480 (15 frames/sec.)	15 sec.
HQ	320 × 240 (15 frames/sec.)	50 sec.
SQ	160 × 120 (15 frames/sec.)	125 sec.

No. of pictures when fully charged : Approx. 300 (based on CIPA battery life measurement standards)

No. of effective pixels : 8,000,000 pixels

Image pickup device : 1/1.8" CCD (primary color filter), 8,320,000 pixels (gross)

Lens : Olympus lens 8.0 to 24.0 mm, f2.8 to 4.9 (equivalent to 38 to 114 mm on a 35mm camera)

Photometric system : Digital ESP metering, spot metering system

Shutter speed : 4 to 1/2000 sec.

Shooting range : 0.5 m (19.7 in.) to ∞ (normal), 0.2 m (7.9 in.) to ∞ (macro mode)
0.03 m (1.2 in.) to 0.5 m (19.7 in.) (W only) (super macro mode)

Monitor : 2.5" TFT color LCD display, 230,000 pixels

Flash charge time	:	Approx. 6 sec. (for full flash discharge at room temperature using a new fully charged battery)
Outer connector	:	DC-IN jack USB connector, A/V OUT jack (multi-connector)
Automatic calendar system	:	2000 up to 2099
Water resistance		
Type	:	Equivalent to IEC Standard publication 529 IPX4 (under OLYMPUS test conditions)
Meaning	:	Camera is not damaged by water spray from any direction.
Operating environment		
Temperature	:	0°C to 40°C (32°F to 104°F) (operation)/ -20°C to 60°C (-4°F to 140°F) (storage)
Humidity	:	30% to 90% (operation)/10% to 90% (storage)
Power supply	:	One Olympus lithium ion battery (LI-10B/LI-12B) or Olympus AC adapter
Dimensions	:	102.8 mm (W) × 57.6 mm (H) × 32.9 mm (D) (4.0 × 2.3 × 1.3 in.) excluding protrusions
Weight	:	181.5 g (5.9 oz) without battery and card

Lithium ion battery (LI-12B)

Product type	:	Lithium ion rechargeable battery
Standard voltage	:	DC 3.7 V
Standard capacity	:	1230 mAh
Battery life	:	Approx. 300 full recharges (varies on usage)
Operating environment		
Temperature	:	0°C to 40°C (32°F to 104°F) (charging)/ -10°C to 60°C (14°F to 140°F) (operation)/ 0°C to 30°C (32°F to 86°F) (storage)
Dimensions	:	32 × 46 × 10 mm (1.3 × 1.8 × 0.4 in.)
Weight	:	Approx. 30 g (1 oz)

Battery charger (LI-10C)

Power requirements	:	AC 100 to 240 V (50 to 60 Hz) 9 VA (100 V) to 16 VA (240 V)
Output	:	DC 4.2 V, 860 mA
Charging time	:	Approx. 120 min.
Operating environment		
Temperature	:	0°C to 40°C (32°F to 104°F) (operation)/ -20°C to 60°C (-4°F to 140°F) (storage)
Dimensions	:	46 × 36.5 × 85 mm (1.8 × 1.4 × 3.3 in.)
Weight	:	Approx. 70g (2.3 oz)

Design and specifications subject to change without notice.

SAFETY PRECAUTIONS

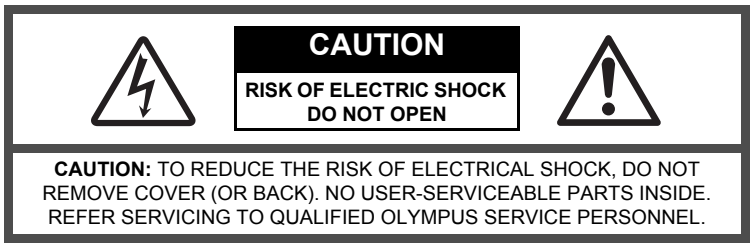
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED OLYMPUS SERVICE PERSONNEL.

Lightning flash with an arrowhead, enclosed in a triangle, alerts you to the presence of uninsulated voltage points inside the product which could cause a serious electrical shock.

An exclamation mark enclosed in a triangle alerts you to important operating and maintenance instructions in the documentation provided with the product.

WARNING!
TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK, NEVER EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.

En

General Precautions

Read All Instructions — Before you use the product, read all operating instructions.

Save These Instructions — Save all safety and operating instructions for future reference.

Heed Warnings — Read carefully and follow all warning labels on the product and those described in the instructions.

Follow Instructions — Follow all instructions provided with this product.

Cleaning — Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product.

Attachments — For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.

Water and Moisture — Never use this product around water (near a bathtub, kitchen sink, laundry tub, wet basement, swimming pool or in the rain). For precautions on products with weatherproof designs, read the weatherproofing sections of their manuals.

Location — To avoid damage to the product and prevent personal injury, never place this product on an unstable stand, tripod, bracket, table or cart. Mount only on a stable tripod, stand, or bracket. Follow the instructions that describe how to safely mount the product, and use only the mounting devices recommended by the manufacturer.

Power Sources — Connect this product only to the power source described on the product label. If you are not sure about the type of power supply in your home, consult your local power company. Refer to your operating instructions for information on using the product with a battery.

Grounding, Polarization — If this product can be used with a specified AC adapter, the adapter may be equipped with a polarized alternating current line plug (a plug with one blade wider than the other). This safety feature allows the plug to fit into the power outlet only one way. If you cannot insert the plug into the wall outlet, pull it out, reverse it, and then reinsert it. If the plug still fails to fit, contact an electrician and have the receptacle replaced.

Protecting the Power Cord — The power supply cord should be placed so it will not be walked on. Never put a heavy object on the power cord or wrap the cord around the leg of a table or chair. Keep the area around the power cord connection points, at the power outlet, and at the product connection, free of all AC adapter or accessory power cords.

Lightning — If a lightning storm occurs while using a specified AC adapter, remove it from the wall outlet immediately. To avoid damage from unexpected power surges, always unplug the AC adapter from the power outlet and disconnect it from the camera when the camera is not in use.

Overloading — Never overload wall outlets, extension cords, power strips, or other power connection points with too many plugs.

Foreign Objects, Liquid Spillage — To avoid personal injury caused by fire or electrical shock from contact with internal high voltage points, never insert a metal object into the product. Avoid using the product where there is a danger of spillage.

Heat — Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers.

Servicing — Refer all servicing to qualified personnel. Attempting to remove the covers or disassemble the product, could expose you to dangerous high voltage points.

Damage Requiring Service — If you notice any of the conditions described below while using a specified AC adapter, unplug it from the wall outlet and refer servicing to qualified service personnel:

a) Liquid has been spilled onto the product or some other object has fallen into the product.
b) The product has been exposed to water.
c) The product does not operate normally despite following operating instructions. Adjust only the controls described in the operating instructions as improper adjustment of other controls could damage the product and require extensive repair work by a qualified technician.
d) The product has been dropped or damaged in any way.
e) The product exhibits a distinct change in performance.

Replacement Parts — When replacement parts are required, make sure that the service center uses only parts with the same characteristics as the originals, as recommended by the manufacturer. Unauthorized substitution of parts could result in fire, electrical shock, or create other hazards.

Safety Check — Upon completion of servicing or repairs, ask the service technician to perform safety checks to determine that the product is in good working order.

⚠ **DANGER**	If the product is used without observing the information given under this symbol, serious injury or death may result.
⚠ **WARNING**	If the product is used without observing the information given under this symbol, injury or death may result.
⚠ **CAUTION**	If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or the loss of valuable data may result.

Handling the Camera

⚠ WARNING

● Do not use the camera near flammable or explosive gases.

- To avoid causing a fire or explosion, never use the camera near flammable or explosive gases.

● Do not use the flash on people (infants, small children, etc.) at close range.

- Use caution when taking flash pictures at close range. When you fire the flash, you must be at least 1 m (3 ft.) away from the faces of your subjects, especially when taking pictures of infants and small children. Firing the flash too close to the subject's eyes could cause a momentary loss of vision.

- **Keep young children and infants away from the camera.**
  - Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury:
    - Becoming entangled in the camera strap, causing strangulation.
    - Accidentally swallowing the battery, cards or other small parts.
    - Accidentally firing the flash into their own eyes or those of another child.
    - Accidentally being injured by the moving parts of the camera.
- **Do not look at the sun or strong lights through the camera.**
  - To avoid damaging your eyes, never aim the camera directly into the sun, or any other extremely bright light source.
- **Do not touch charging batteries (included in some areas) or the battery charger until charging is finished and the batteries have cooled.**
  - The batteries and battery charger become hot while charging. A specified AC adapter also becomes hot during long use. At these times, they may cause minor burns.
- **Do not use or store the camera in dusty or humid places.**
  - Using or storing the camera in dusty or humid places may result in a fire or electric shock.
- **Do not cover the flash with a hand while firing.**
  - Do not cover the flash with a hand while firing or touch it after it has just been fired. It may be hot and cause minor burns. Avoid using the flash for extended periods.
- **Do not take apart or modify the camera.**
  - Never attempt to disassemble the camera. The internal circuits contain high voltage points which could cause serious burns or electrical shock.
- **Do not let water or foreign objects inside the camera.**
  - If the camera is accidentally dropped in water, or if liquid is spilled into the camera, stop using it, allow it to dry, and then remove the batteries. Contact the nearest authorized Olympus service center.

⚠ CAUTION

- **Stop using the camera immediately if you notice any unusual odors, noise, or smoke around it.**
  - If you notice any unusual odors, noise, or smoke around the camera during operation, switch it off immediately – and disconnect a specified AC adapter (if attached). Allow the camera to sit idle for a few minutes to cool. Take the camera outdoors, away from flammable objects, and carefully remove the batteries. Never remove the batteries with bare hands, which may cause a fire or burn your hands. Contact the nearest Olympus service center immediately.

● Do not use the camera with wet hands.

- To avoid dangerous electrical shock, never hold or operate the camera with wet hands.

● Do not leave the camera in places where it may be subject to extremely high temperatures.

- Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire. Do not use the charger or AC adapter if it is covered (such as a blanket). This could cause overheating, resulting in fire.

● Handle the camera with care to avoid getting a low-temperature burn.

- When the camera contains metal parts, overheating can result in a low-temperature burn. Pay attention to the following:
  - When used for a long period, the camera will get hot. If you hold on to the camera in this state, a low-temperature burn may be caused.
  - In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures.

● Be careful with the strap.

- Be careful with the strap when you carry the camera. It could easily catch on stray objects – and cause serious damage.

● Use only the AC adapter specified by Olympus.

- Never use any AC adapter except one specified by Olympus. Using a different AC adapter may damage the camera or power source, or result in accidents or fire. Ensure the adapter used is designed for your region or country. For more information, contact the nearest Olympus service center or the store of purchase. Olympus makes no representations or warranties regarding any damages caused by AC adapters not recommended by Olympus.

● Do not damage the power-supply cord.

- Never pull or modify the power-supply cord of the AC adapter or accessories. Make sure only the plug is securely held during insertion and removal from the outlet. Stop using the camera immediately, and contact the nearest Olympus service center or the store of purchase if:
  - The power-supply cord becomes hot, or it gives off smoke or unusual odors.
  - The power-supply cord is cut or damaged, or the plug has a faulty contact.

Battery handling precautions

Follow these important guidelines to prevent batteries from leaking, overheating, burning, exploding, or causing electrical shocks or burns.

⚠ DANGER

- This camera uses a lithium ion battery specified by Olympus. Charge the battery with the specified charger. Do not use any other chargers.
- Never heat or incinerate batteries.
- Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal objects such as jewelry, pins, fasteners, etc.
- Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.
- To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way, by soldering, etc.
- If battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention immediately.
- Always store batteries out of the reach of small children. If a child accidentally swallows a battery, seek medical attention immediately.

⚠ WARNING

- Keep batteries dry at all times. Never allow them to come into contact with fresh or salt water.
- To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for this product.
- Insert the battery carefully as described in the operating instructions. Never load the battery with its +/- terminals reversed. Never force the battery into the battery compartment.
- If the rechargeable battery has not been recharged within the specified time, stop charging it and do not use it.
- Do not use a battery if it is cracked or broken.
- If a battery leaks, becomes discolored or deformed, or becomes abnormal in any other way during operation, stop using the camera and consult your dealer or an authorized Olympus service center. Continued use may result in fire or electric shock.
- If a battery leaks fluid onto your clothing or skin, remove the clothing and flush the affected area with clean, running cold water immediately. If the fluid burns your skin, seek medical attention immediately.
- Never attempt to modify the battery compartment on the camera, never insert anything (other than the recommended battery) into the battery compartment.
- Never subject batteries to strong shocks or continuous vibration.

⚠ CAUTION

- Before loading, always inspect the battery carefully for leaks, discoloration, warping, or any other abnormality.
- The battery may become hot during prolonged use. To avoid minor burns, do not remove it immediately after using the camera.
- Always unload the battery from the camera before storing the camera for a long period.

Weatherproof feature

This camera is weatherproof, but it cannot be used underwater.
Olympus will not assume any responsibility for malfunction of the camera caused by water getting inside as a result of misuse by the user.
The camera is weatherproof and is not damaged by water spray from any direction.
Observe the following precautions when using the camera.

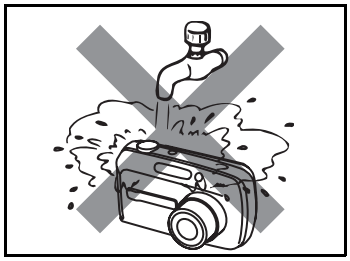

● Do not wash the camera with water.

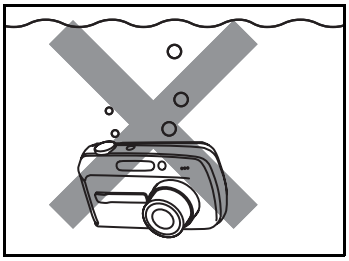

● Do not drop the camera into water.

● Do not take pictures underwater.

Water may get inside the camera if the battery compartment/ connector cover or card cover are not firmly closed.

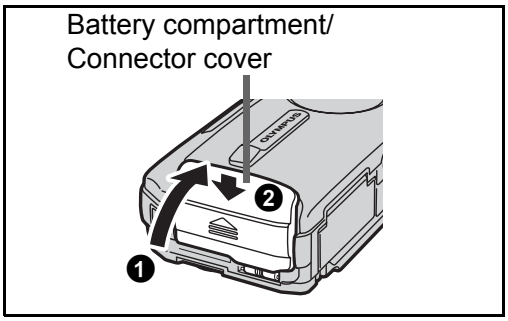

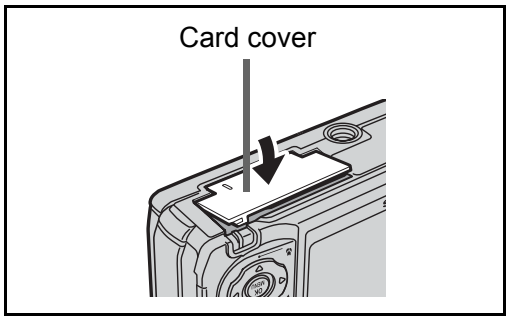

● If the camera gets splashed, wipe the water off as soon as possible with a dry cloth.
● The rechargeable battery and other camera accessories are not weatherproof.

For customers in North and South America

For customers in USA

Declaration of Conformity

Model Number	:	Stylus 800/σ DIGITAL 800
Trade Name	:	OLYMPUS
Responsible Party	:	OLYMPUS IMAGING AMERICA INC.
Address	:	Two Corporate Center Drive, P.O. Box 9058, Melville, NY 11747-9058 U.S.A.
Telephone Number	:	1-631-844-5000

Tested To Comply With FCC Standards
FOR HOME OR OFFICE USE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

For customers in Canada

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

For customers in Europe

"CE" mark indicates that this product complies with the European requirements for safety, health, environment and customer protection. "CE" mark cameras are intended for sales in Europe.

This symbol [crossed-out wheeled bin WEEE Annex IV] indicates separate collection of waste electrical and electronic equipment in the EU countries.
Please do not throw the equipment into the domestic refuse.
Please use the return and collection systems available in your country for the disposal of this product.

Trademarks

- IBM is a registered trademark of International Business Machines Corporation.
- Microsoft and Windows are registered trademarks of Microsoft Corporation.
- Macintosh is a trademark of Apple Computer Inc.
- xD-Picture Card™ is a trademark.
- All other company and product names are registered trademarks and/or trademarks of their respective owners.
- The standards for camera file systems referred to in this manual are the "Design Rule for Camera File System/DCF" standards stipulated by the Japan Electronics and Information Technology Industries Association (JEITA).

Provisions of warranty

1. If this product proves to be defective, although it has been used properly (in accordance with the written Handling Care and Operating instructions supplied with it), during a period of two years from the date of purchase from an authorized Olympus distributor within the business area of Olympus Imaging Europa GmbH as stipulated in the authorized distributors list this product will be repaired, or at Olympus's option replaced, free of charge. To claim under this warranty the customer must take the product and this Warranty Certificate before the end of the two year warranty period to the dealer where the product was purchased or any other Olympus service station within the business area of Olympus Imaging Europa GmbH as stipulated in the authorized distributor list. During the one year period of the World Wide Warranty the customer may turn the product in at any Olympus service station. Please notice that not in all countries such Olympus service station exists.
2. The customer shall transport the product to the dealer or Olympus authorized service station at his own risk and shall be responsible for any costs incurred in transporting the product.
3. This warranty does not cover the following and the customer will be required to pay repair charge, even for defects occurring within the warranty period referred to above.
   (a) Any defect that occurs due to mishandling (such as an operation performed that is not mentioned in the Handling Care or other sections of the instructions, etc.)
   (b) Any defect that occurs due to repair, modification, cleaning, etc. performed by anyone other than Olympus or an Olympus authorized service station.
   (c) Any defect or damage that occurs due to transport, a fall, shock, etc. after purchase of the product.
   (d) Any defect or damage that occurs due to fire, earthquake, flood damage, thunderbolt, other natural disasters, environmental pollution and irregular voltage sources.
   (e) Any defect that occurs due to careless or improper storage (such as keeping the product under conditions of high temperature and humidity, near insect repellents such as naphthalene or harmful drugs, etc.), improper maintenance, etc.
   (f) Any defect that occurs due to exhausted batteries, etc.
   (g) Any defect that occurs due to sand, mud, etc. entering the inside of the product casing.
   (h) When this Warranty Certificate is not returned with the product.
   (i) When any alterations whatsoever are made to the Warranty Certificate regarding the year, month and date of purchase, the customer's name, the dealer's name, and the serial number.
   (j) When proof of purchase is not presented with this Warranty Certificate.
4. This Warranty applies to the product only; the Warranty does not apply to any other accessory equipment, such as the case, strap, lens cap and batteries.
5. Olympus's sole liability under this warranty shall be limited to repairing or replacing the product. Any liability for indirect or consequential loss or damage of any kind incurred or suffered by the customer due to a defect of the product, and in particular any loss or damage caused to any lenses, films, other equipment or accessories used with the product or for any loss resulting from a delay in repair or loss of data, is excluded. Compelling regulations by law remain unaffected by this.

Notes regarding warranty maintenance

1. This warranty will only be valid if the Warranty Certificate is duly completed by Olympus or an authorized dealer or other documents contain sufficient proof. Therefore, please make sure that your name, the name of the dealer, the serial number and the year, month and date of purchase are all completed or the original invoice or the sales receipt (indicating the dealer's name, the date of purchase and product type) is attached to this Warranty Certificate. Olympus reserves the right to refuse free-of-charge sercvice if neither Warranty Certificate is completed nor the above document is attached or if the information contained in it is incomplete or illegible.
2. Since this Warranty Certificate will not be re-issued, keep it in a safe place.

* Please refer to the appended list for the authorized international Olympus service network.

Disclaimer of Warranty

Olympus makes no representations or warranties, either expressed or implied, by or concerning any content of these written materials or software, and in no event shall be liable for any impelled warranty purchase are all completed or the original invoice or the sales receipt of merchantability or fitness for any particular purpose or for any consequential, incidental or indirect damages (including but not limited to damages for loss of business profits, business interruption and loss of business information) arising from the use of inability to use these written materials or software. Some states do not allow the exclusion or limitation of liability for consequencetial or incidental damages, so the above limitations may not apply to you.

Memo

OLYMPUS®

http://www.olympus.com/

OLYMPUS IMAGING CORP.

Shinjuku Monolith, 3-1 Nishi-Shinjuku 2-chome, Shinjuku-ku, Tokyo, Japan

OLYMPUS IMAGING AMERICA INC.

Two Corporate Center Drive, P.O. Box 9058, Melville, NY 11747-9058, U.S.A. Tel. 631-844-5000

Technical Support (USA)
24/7 online automated help: http://www.olympusamerica.com/support
Phone customer support: Tel. 1-888-553-4448 (Toll-free)

Our phone customer support is available from 8 am to 10 pm
(Monday to Friday) ET
E-Mail: distec@olympus.com
Olympus software updates can be obtained at: http://www.olympus.com/digital

OLYMPUS IMAGING EUROPA GMBH

Premises: Wendenstrasse 14-18, 20097 Hamburg, Germany
Tel: +49 40-23 77 3-0 / Fax: +49 40-23 07 61
Goods delivery: Bredowstrasse 20, 22113 Hamburg, Germany
Letters: Postfach 10 49 08, 20034 Hamburg, Germany

European Technical Customer Support:
Please visit our homepage **http://www.olympus-europa.com**
or call our TOLL FREE NUMBER* : **00800 - 67 10 83 00**
for Austria, Belgium, Denmark, Finland, France, Germany, Italy, Luxemburg, Netherlands, Norway, Portugal, Spain, Sweden, Switzerland, United Kingdom
* Please note some (mobile) phone services/provider do not permit access or request an additional prefix to +800 numbers.

For all not listed European Countries and in case that you can't get connected
to the above mentioned number please make use of the following
CHARGED NUMBERS: **+49 180 5 - 67 10 83** or **+49 40 - 237 73 899**
Our Technical Customer Support is available from 9 am to 6 pm MET (Monday to Friday)

2005 OLYMPUS IMAGING CORP.

Printed in China

VH082101